

BoM Order Operation Details

Open the form from the Bill of Materials by clicking on the operation icon on the Row type field.

On this form the operation details can be modified and specialized for the particular BoM. The BoM Order Operation Details inherits data from the operation item's Manufacturing Operations form.

Header

Operation code

The code of the operation item.

Operation name

The name of the operation.

Time Values

The duration each operation step requires, displayed in the selected 'Operation Time UoM'.

The safety, setup, job and teardown time consume the capacity of the work center. Before and after times do not consume work center capacity but the job scheduling logic will take them into account when calculating the beginning of the jobs in the sequence of operations.

- Before time: The duration of the tasks to be done before allocating the work center for the operation. No work center is allocated for the before time period.
- Safety time: Duration of the time buffer. No PDC bookings can be created for the safety time.
- Setup time: Duration of the tasks to be done before the production starts.
- Job time: The actual production time for the amount of units defined in time base.
- Teardown time: The duration of the tasks after the production finished but before the work center is released.
- After time: The duration of the tasks to be done after releasing the work center. The work center is released and available for other operations.

Time Base

The number of the units of the operation the job time refers to.

Is outsourceable? (Y/N)

Indicates whether the operation is outsourceable or not. This option cannot be changed after the operation was created. If the operation is outsourceable the item is set as Purchased Item.

Item Group

The item group the operation belongs to. Item groups with 'Standard' valuation method can be selected. When changing the 'Item Group' either on the Item Master Data or on the Manufacturing Operations form, the 'Item Group' on the other form will be changed too.

Operation break

During manufacturing, an operation can be stopped and restarted or the work center can be changed. With the Operation Break setting the user can define whether these break types are allowed or not.

- Allowed: Intermissions and work center changes are allowed during the operation.
- Denied: No breaks are allowed during the operation.

- Allowed WC: Other operations may get in between the sequence of the operation, but the work center cannot be changed during the operation.
- Allowed NBP: The work center can be changed, but intermissions are not allowed during the operation, therefore other operations cannot get in between the sequence of the operation.
- Allowed WCNBP: Neither the change of the work center, nor intermissions are allowed. It is recommended to use this option instead of the old 'Denied' option.

The 'Allowed WC', 'Allowed NBP' and 'Allowed WCNBP' operation break types are not allowed in multi-dimensional allocation environment and do not work with parallel operations.

Operation Time UoM

The unit of measurement of the operation time. Possible values: Days, Hours, Minutes, Seconds, Weeks.

Is Parallel Operation (Y/N)

Indicates whether an operation can be performed on multiple work centers at the same time or not. This way the overall duration of an actual manufacturing operation may be much shorter if enough resource capacities are available.

Max Parallel Operations

The maximum number of work centers where the operation can be performed if it is a parallel operation.

Allocation Window

Defines the horizon of the allocation. 'Weeks', 'Days', 'Hours', 'Minutes' and 'Seconds' can be selected as the time scale.

Min Job Quantity

The minimum quantity that must be produced during an allocation.

2018/03/22 11:56 · csuhaa

Main Product Code and Name

The item code and name of the main product.

Is Overlapping Operation

Indicates whether the operation can overlap the previous operation or not. When an operation is an overlapping operation, it can be started right after the previous operation is started, otherwise the earliest start date of an operation is the due date of the previous operation.

Overlapping Quantity

The quantity produced after the following overlapping operation can be started.

Resource Requirements tab

Work Center Feature

Select a work center feature for the operation. This is a mandatory field. The parameter is used extensively by the job scheduler; when the scheduler tries to find work center capacities for an operation, it will search for work centers that have the selected feature for the operation.

Is Mandatory Work Center (Y/N)

Indicates whether the operation must take place on the preferred work center or not.

Preferred Work Center

A preferred work center can be set. Every work center with the feature linked to the operation can be selected.

The work center set here will be preferred during the allocation process. If the work center is free, the operation will be allocated there. If the work center is busy, the system will calculate the delay the usage of this work center could cause. If this delay exceeds the maximum delay set on the '*MRP Max Delay For Pref. WC (s)*' option on Produmex Manufacturing settings, the operation will be allocated to another work center, otherwise the system will schedule it to the preferred work center.

When using the multi-dimensional allocation strategy, employee, tool and constraint requirements can be added to the operation too. Select a resource type then add the feature and a preferred resource. The 'Feature Name' and 'Resource Name' fields will be automatically filled. Only resources linked to the selected feature and features linked to the selected resource type can be added.

Indicate whether the resource is mandatory or not on the '*Is Mand. Res.*' cell.

On the 'Amount' field in an employee row indicate the employee capacity the operation uses. If the Amount is set to one, it means that the operation requires 100% of the employee capacity. Therefore the amount set for an employee cannot be greater than one.

On the amount field of a tool set the needed quantity of the tool during an operation.

Additional resources might not being used during the entire operation. On the Setup, Job and Teardown fields mark that the resource is required in which step of the operation. The setup, job and teardown time of a supplementary resource will be the same as the work center time of the respective step.

2018/03/22 11:56 · csuhaa

Outsourcing tab

Mark the operation as outsourced by ticking the 'Is Outsourced?' box. Add a lead time for the outsourcing on the 'Outsourcing Lead Time' textbox. The time scale of the lead time is in days. If set, this lead time will be taken into account during the scheduling instead of the lead time on the Item Master Data.

An operation can be fully or partially outsourced. Define the non-outsourcable quantity on the 'In House Quantity' field. The default value is the planned quantity unless the '*Null InHouse Quantity for Outsourcing*' is set to true on the Master Data Tab of Produmex Manufacturing settings. If this setting is enabled, the default InHouse quantity is zero.

A new UoM for the outsourcing can be defined on the '*Outsourcing UoM*' field. The conversion rate between the inventory UoM and the Outsourcing UoM can be specified on the '*Items Per Outsourcing Unit*' field. The outsourcing UoM can be used when the unit of measurement the sub-contractor uses

differs from the UoM the company uses. If an outsourcing UoM is set, it will be the UoM in the purchase order.

Add the potential outsourcing suppliers on the grid:

- *Supplier Code*: Enter the card code of the supplier to the supplier code cell.
- *Supplier Name*: The name of the supplier. The *Supplier Name* will be automatically filled after the *Supplier Code* is entered.
- *Planned Quantity*: The Planned Quantity defines the outsourced quantity. When outsourcing to more than one supplier, the '*Planned Qty*' defines the ratio of the outsourced operation the supplier covers.

Documentation tab

On this tab remarks and images can be added to the operation. Enter the text to the textbox. Click on the camera icon to add an image. Remove the image by clicking on the camera icon with the red x.

The screenshot shows the 'BoM Operation Details' window with the 'Documentation' tab selected. The window is divided into two main sections. The top section contains various input fields for operation details, including Operation Code (cPPD), Operation Name (Painting and Drying), Main Product Code (mM1001), Main Product Name (Painted Bike Framework), and several time-related fields (Before Time, Safety Time, Setup Time, Job Time, Teardown Time, After Time, Time Base) with units and values. The bottom section contains a large text area for documentation, with a camera icon for adding images. Below the text area are 'Update' and 'Cancel' buttons. The window also has tabs for 'Resource Requirements', 'Outsourcing', 'Documentation', 'Cost Amounts', and 'Parameters'.

Field	Value
Operation Code	cPPD
Operation Name	Painting and Drying
Main Product Code	mM1001
Main Product Name	Painted Bike Framework
Before Time	min 0.000
Safety Time	min 0.000
Setup Time	min 5.000
Job Time	min 20.000
Teardown Time	min 5.000
After Time	min 400.000
Time Base	1.000

Operation Break: Allowed
Operation Time UoM: Minutes
Is Parallel Operation: ☐
Is Overlapping Operation: ☐
Max Parallel Operations: 0
Overlapping Quantity: 0.000
Allocation Window: 0.000
Min Job Quantity: 0.000

Cost Amounts

Cost types with parameters can be set on this tab for cost calculation purposes.

Cost Type

Select a 'Cost Type'. Multiple cost type rows can be defined for an operation. Define cost types on the 'Cost Type' form that can be reached via: Production > Cost Calculation > Cost Type.

- Setup Amount: The Setup Amount for the given operation from the cost amounts.
- Job Amount: The Job Amount for the given operation from the cost amounts.
- Teardown Amount: The Teardown Amount for the given operation from the cost amounts.
- Cycle Amount: The Cycle Amount for the given operation from the cost amounts.
- Quantity Amount: The Quantity Amount for the given operation from the cost amounts.

- Fix Amount: The Fix Amount for the given operation from the cost amounts.

For more information about cost calculation please see: [Cost and Price Calculations](#)

2018/03/22 11:56 · csuhaa

Parameters

When the 'Use Operation Parameters' setting is enabled on the PDC tab of the Produmex Manufacturing settings, an additional 'Parameter' tab is displayed on the form.

On this tab parameters for shopfloor [Quality Controlling](#) can be set. Parameters types can be set up on the *OperationParameterTypes* UDT.

2018/03/22 11:56 · csuhaa

From:

<https://wiki.produmex.name/> - **Produmex**

Permanent link:

https://wiki.produmex.name/doku.php?id=implementation:manufacturing:bom_op

Last update: **2021/04/20 09:35**

